



# All-In-One Hanging Instructions

#### Beehive Hanger Instructions (Support Pins Included):




STEP 1: Hold the frame up to the wall in the desired position and press against the top of the frame. Apply enough pressure so the small points on the front of the hangers mark your drywall.

<u>TIP</u>: For a more noticeable mark, GENTLY jiggle the frame corners while pressing. Be sure to exercise care not to scratch your wall.



STEP 2: Insert the long end of the support pin into the wall and press into the spot where you made your mark. Be sure to insert at a downward angle so the rectangular plate is parallel to the wall as shown. Repeat for the second support pin.


<u>TIP:</u> Use a tool to press in the support pin as to avoid any injuries. (Hammer, pressing tools, handles of tools, etc)



<u>STEP 3:</u> Hang your frame on the support pins. If adjustment is required, simply lift the frame from the pin(s) and reinsert into another hole in the hanger.

<u>TIP</u>: To ensure a straight hang, lay any level on top of the frame and slightly adjust until the level displays that it is level (i.e: Bubble is between center lines, phone level displays "0",


#### Wire Hanger Instructions (Nail(s) not Included):

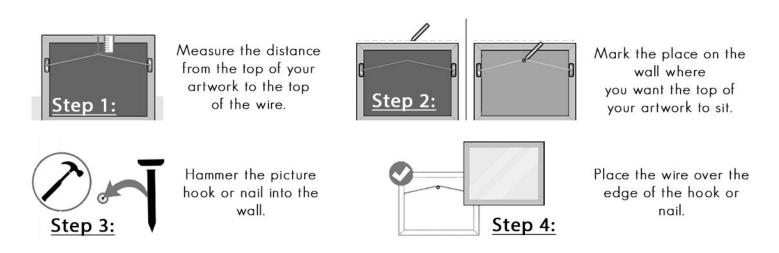


(Note: On larger canvas', it is recommended to use 2 nails to keep from shifting on the wall)

#### Sintra Back Hanging Instructions

(Screw(s) and anchor(s) included):

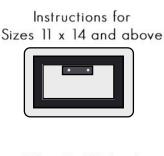





(Not Included)

Level (Not Included)



(Not Included

Pencil/Pen




Screws


(Included)

Anchors


(Included)

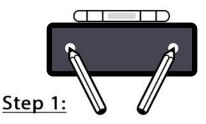


Place hanging plate in desired spot on the wall. Then, lay level on top to assure a straight hang. Mark the holes. Put aside hanging plate.



Place hanging plate over the anchor openings on the wall, then screw in the screws into each anchor opening.



Press tip of the anchor to the mark. Using the screw driver, screw in the anchor. Repeat step for other anchors.



Hang the top rail of the frame onto the hanging plate and release. Done!

## Sintra Keyhole Hanging Instructions

Step 1:

(Screw and anchor included):

Instructions For Smaller Than 11 x 14









Mark a hole where you would like to hang the piece.

Step 3:

Press tip of the anchor to the mark. Using the screw driver, screw in the anchor.




Press tip of the anchor to the mark. Using the screw driver, screw in the anchor.



To hang, place the circle at the bottom of the "T" over the screw and slide down til it stops. Done!


(Continued On Next Page)

#### Aluminum Back Hanging Instructions

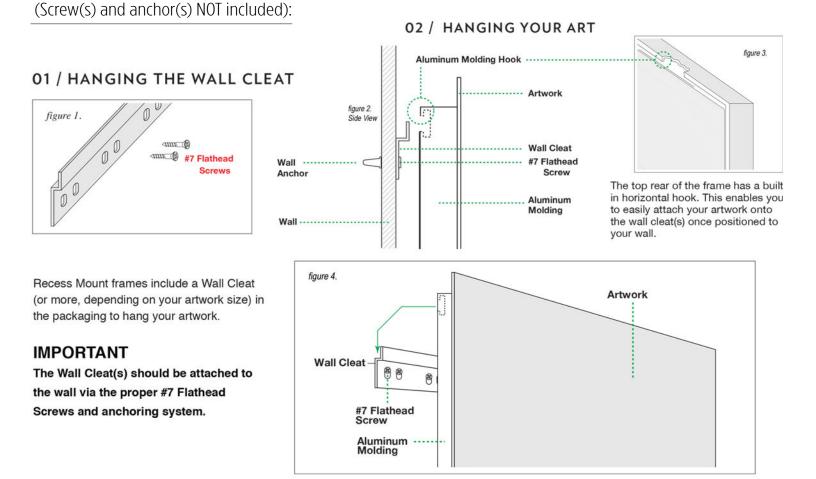


### Sawtooth Hanging Instructions

(Nail(s) not included):



Hammer the picture hook or nail into the wall.



Place the sawtooth on the edge of the hook or nail. Reposition if necessary until hanging straight

